MAINTENANCE

Periodic observation of the Heating Plant is advised to insure safe efficient operation.

- 1). Check control operation and settings.
- 2). Check for odors or soot deposit marks. Door seal may need adjusting or vent connections may require additional sealing.
- 3). Observe burner operation for excessive noise or vibration.
- 4). Check for water leaks.

BOILER CLEANING

Boilers which operate only for heating, need only be cleaned at the end of each heating season. Boilers which operate year round should be cleaned Bi-annually.

It is important that the boiler be cleaned immediately after shut-down and while the cast iron is still warm, firstly because the deposits are more readily removed and, secondly, hardened deposits will absorb moisture and will cause corrosion.

ATTENTION

Before starting to clean the boiler: shut off all power to burner and boiler. Shut off the fuel supply to burner in accordance with Burner Manufacturer's Instruction Manual.

To clean boiler:

- 1). Remove smoke pipe and flue collector at back of boiler.
- 2). Disconnect burner fuel lines as needed to open front door.
- 3). Remove all flue baffles.
- 4). Using the cleaning brush, scrub all fireside surfaces in combustion chamber, flue passages and flue collector area.
- 5). Remove residue and vacuum clean.
- 6). Check condition of flue baffles and replace as needed.
- 7). Check front door and flue collector rope seals, replace as needed.
- 8). Re-assemble and put boiler into operation as needed.

NOTE:

When the boiler is to be "layed-up" at the end of the heating season or out of service for a prolonged period of time:

- A) Make sure all surfaces are clean and dry.
- B) Open boiler front door and place a tray of calcium chloride in the center of the furnace. This will absorb moisture and keep the heat transfer surfaces dry. When calcium chloride becomes mushy, replace with new.
- C) Block door approximately 1/4 open.