


INSTALLATION OF EZ-LOOP HEADER (PN 430150) ON PHANTOM COMBI BOILERS

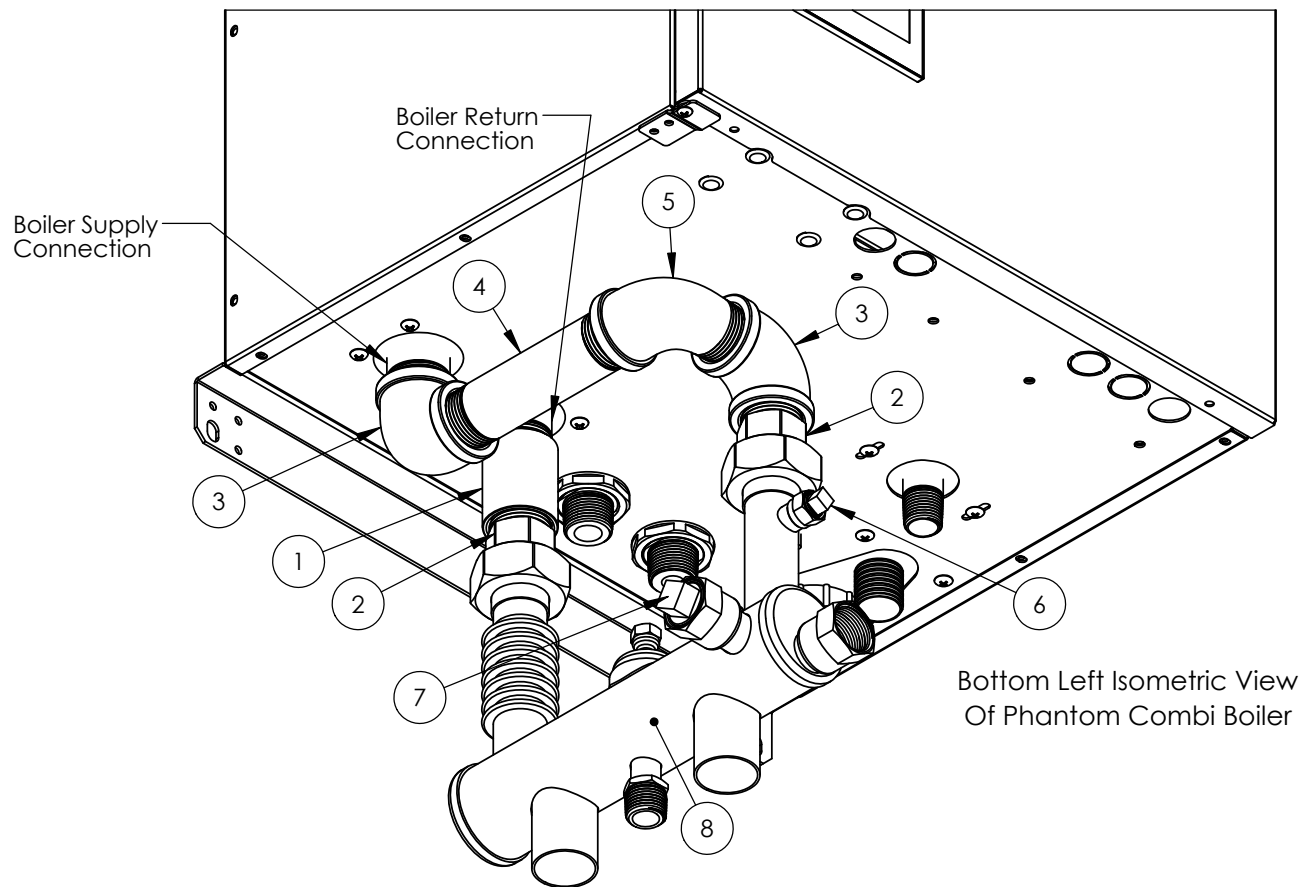

Installation Steps

1. Install 1" steel coupling to return connection under the boiler.
2. Install 1" brass adapter from EZ-Loop kit to coupling.
3. Install 1" 90° black elbow to supply connection under the boiler.
4. Install 1" x 5-1/2" black nipple to elbow.
5. Install 1" black street elbow to other end of nipple.
6. Install 1" 90° black elbow to the end of the street elbow.
7. Install 1" brass adapter from EZ-Loop kit to elbow.
8. Install EZ-Loop header to brass adapters.
9. After completing the above steps refer to the EZ-Loop instructions and Phantom Combi installation manual to complete remaining system piping.

BILL OF MATERIALS		
ITEM NO.	QUANTITY	DESCRIPTION
1*	1	1" NPT STEEL COUPLING (2" LONG)
2	2	1" BRASS ADAPTER (INCLUDED WITH HEADER)
3*	2	1" NPT BLACK 90° ELBOW
4*	1	1" NPT X 5-1/2" BLK NIPPLE (5-3/4" NIPPLE PREFERRED)
5*	1	1" NPT BLACK STREET ELBOW
6*	1	1/4" NPT BLACK PLUG
7*	1	3/4" NPT BLACK PLUG
8	1	EZ-LOOP HEADER (PN 430150)

* Procure locally.